


Compact IP20 EtherCAT[®] protocol I/O Station

32 Digital outputs


CMCT-OM32-0001

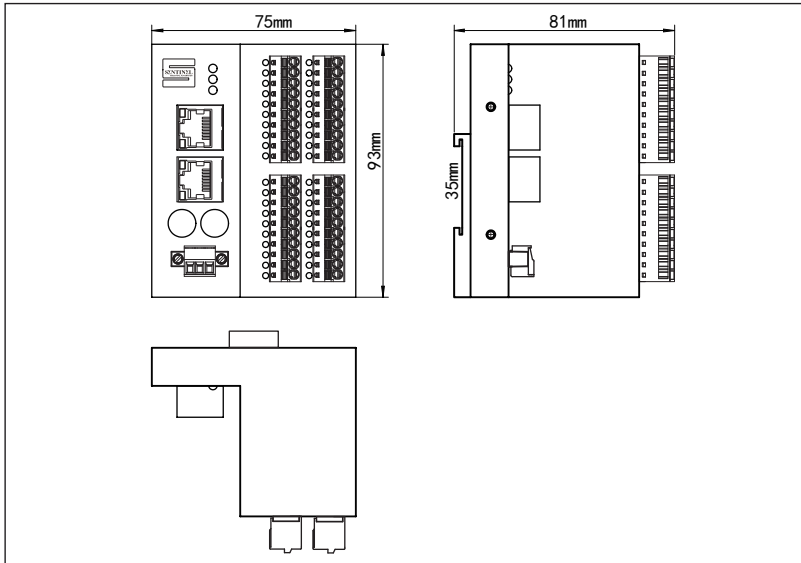

- EtherCAT remote I/O module
- Integrated Ethernet Switch
- Support 100Base-TX
- 2 RJ45 ports for the Ethernet connection
- 32 Digital outputs
- DIN guide rail installation
- Metal housing , Protection class IP20

Supply voltage	24VDC $\pm$ 10%
Operating current	< 75mA
Module and load power supply	UB and UL are internally isolated and need to be powered separately
Load power group	Divided into 4 groups, which need separate power supply
Output	
Number of channels	32
Output type	The common terminal is 0V
Output current	0.2A
Output protection	Overload protection, overheating protection
Output protection reaction time	approximately 20ms
switching frequency	100HZ
Output voltage drop	0.6V
electrical Isolation mode	Optocoupler isolation
communication interface	
Number of communication interface	2
transmission mode	100Base-TX
Automatic consultation mechanism	YES
Automatic cross-flip	YES
Maximum transmission rate	100Mbit/s
Station address spin code setting	NO
Operating temperature	0-55°C

Output terminal

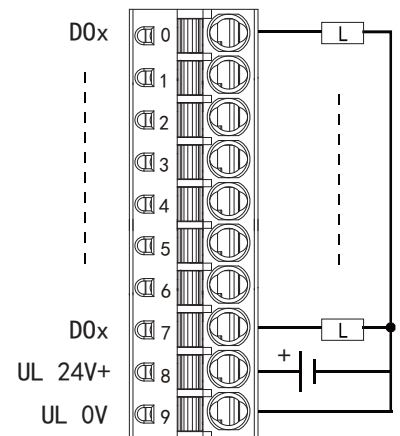


Note : UL is the Load power supply

Communication

RJ45 pin assignment	RJ45 plug
1. YE 2. OG 3. WH 4. N/C 5. N/C 6. BU 7. N/C 8. N/C	

Power Supply

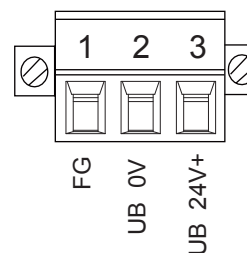

Note : UB is the module power supply

module LEDS

Zone: I

POWER : Green LED light

ON: The module power supply (UB) is normal.

RUN : Green LED light

OFF: The module is in the "INIT" state

Fast flash: The module is in the "Pre-operational" state

Slow flash: The module is in the "Safe-operational" state

ON: The module is in the "OP" state

ERROR : not use

Dix : Yellow LED light

ON : Input active

DOx : Yellow LED light

ON : Output active

NC : not use

COM : not use

LINK/ACT: Yellow LED light

ON : Physical connections have been established

OFF: No connection

Flash: This port has data exchange

Module power terminal

Zone: II

UB+: Module power supply 24VDC positive;

0V : Module power supply 24VDC negative

FG : ground connection

Ethernet interface

Zone: III

IN : EtherCAT BUS In

OUT: EtherCATBUS OUT

IO signal terminal

Zone: IV

Dix : This point is input.

DOx : This point is output.

NC : not use

COM : If COM is negative, connect the PNP sensor

If COM is positive, connect the NPN sensor


Address dialing

Zone: V

At present, setting module address by dialing code is not supported.
This function is reserved. Please do not open this area;

Output point mapping table

	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
BYTE0	DO7	DO6	DO5	DO4	DO3	DO2	DO1	DO0
BYTE1	DOF	DOE	DOD	DOC	DOB	DOA	DO9	DO8
BYTE2	DO17	DO16	DO15	DO14	DO13	DO12	DO11	DO10
BYTE3	DO1F	DO1E	DO1D	DO1C	DO1B	DO1A	DO19	DO18

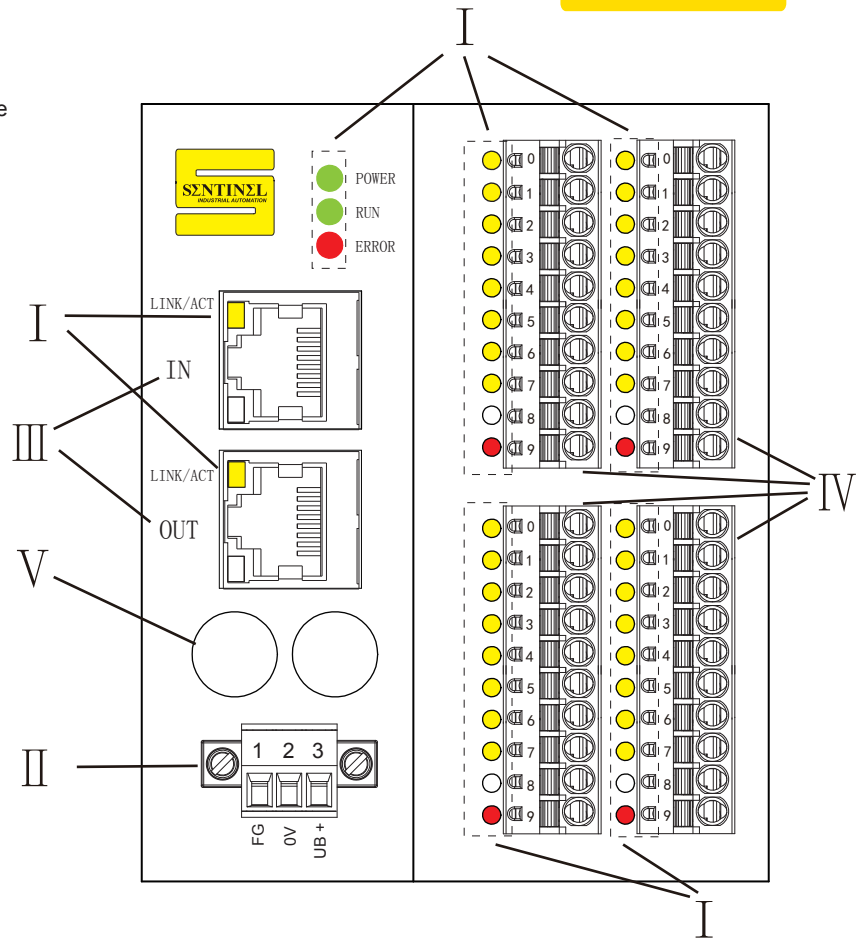

Point distribution and external wiring diagram

Output terminal

